

**OMPHOBBY®**

Global Professional RC Model Brand



# Installation Manual

**Decathlon 55 ARF Version**

Zhuhai Edge Smart Drive Technology Co., Ltd.  
[www.omphobby.com](http://www.omphobby.com)



**Parameter Specification**

<b>Item:</b>	<b>55" Super Decathlon</b>	<b>Color:</b>	Red <input type="checkbox"/> White <input type="checkbox"/> Green <input type="checkbox"/>
<b>WingSpan:</b>	<b>1400mm(55in)</b>	<b>Full Length:</b>	<b>1020mm(40in)</b>
<b>Flight Weight:</b>	<b>1.55kg</b>	<b>The Center of Gravity:</b>	<b>Approx.70-75mm</b>
<b>Wing Area:</b>	<b>34.67dm<sup>2</sup></b>	<b>Wing Load:</b>	<b>44.7g/dm<sup>2</sup></b>
<b>Wing Angle of Incidence:</b>	<b>1.5°</b>	<b>Motor Thrust Angles:</b>	<b>Down2.5°&amp;Right 4°</b>
<b>Pack Dimension</b>	<b>107*32*25 (L*H*W)cm</b>	<b>Gross Weight:</b>	<b>7.35KG</b>
<b>Servo: OMPHOBBY SG5 17g *4 : (Aileron*2,Elevator*1, Rudder*1)</b>			
<b>Electric Power (Recommended):</b>			
<b>Motor: Sunnysky 2820 , ESC: 40A, Propeller: Eolo 13x7E/12x6.5E, Lipo battery:3S/4S 2200-2600mah</b>			


**Recommended Settings of Dual Rates and Exponentials of Control Surfaces**

	<b>Low rate</b>	<b>Low rate exp</b>	<b>High rate</b>	<b>High rate exp</b>
Aileron	60	50%	100	40%
Elevator	50	40%	100	30%
Rudder	60	40%	100	30%

➤ Package contents  
(ARF version)




## Wings Assembly

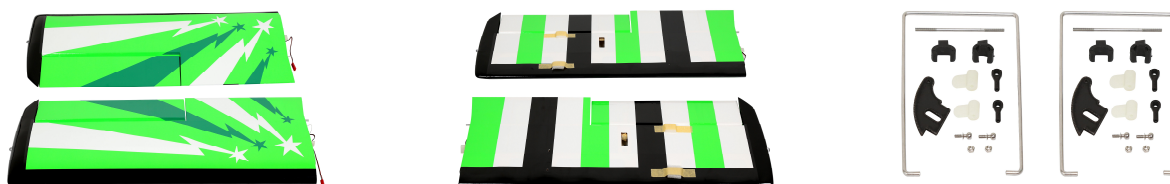

1. Carefully locate the slots which has been made on aileron, lightly cut through the covering but not into the balsa sheeting; Insert 2mm inner hexagon screwdriver into the slots to make sure the glue inflow into the slots to secure the control arms.
2. Use sand paper to roughen the root of control arms. Try to insert it into the mounting slot to adjust the position at first, then take it out, apply glue to the slot and the root of the control arm insert it into the slot to secure it.




3. Pull out the white polyester thread from the servo holes with tweezers, tie up with the servo connector.

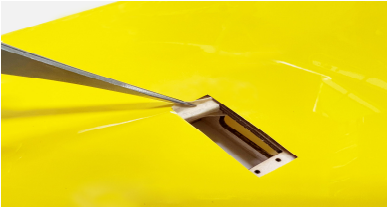

4. Find the other head of white polyester thread from wing side, pull it until servo is placed in servo hole.





5. Use screwdriver to tighten the screws to secure the servos.
6. Secure servo arms and control arms with ball head pull rod (After the glue is dried), put the cup head hexagonal screw, gasket, ball head on servo arm, secure it with iron pliers, adjust the ball head pull rods to proper length.
7. Secure screw, washer, ball head to control arm, check the degrees between servo arms and control arms.

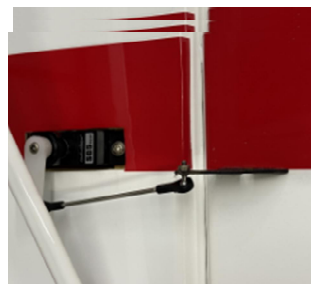


8. Slide the left and right wings on to the carbon fiber wing tubes, and tighten the M5 nylon screws. Then, place the fuselage bottom up and remove the screws at the bottom of the wings. If necessary, gently bend the tips of the wing supports so the ends are flush with the respective screw holes on the wings and fuselage. Be sure to align the large wing supports towards the leading edge of the wings, and the smaller ones towards the trailing edges.

9. Make sure the two holes overlap with the claw holes, and then screw in the two-wing support frame on the fuselage.

(Note: Do not tighten each screw all at once. The screws at both ends of the wing support frame should be screwed into the threads and then tightened one by one.)

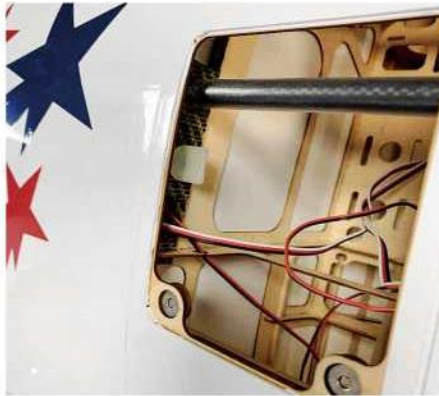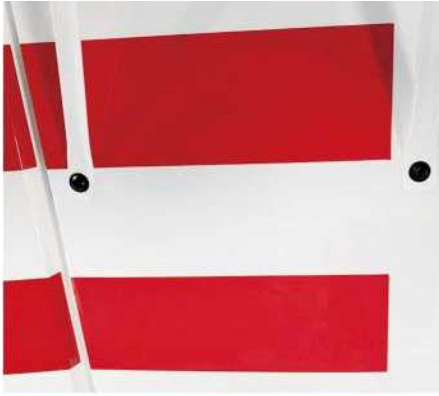


10. Pull up the stainless-steel cable wing support frame on the wing, and then clamp the two black plastic pieces on the front and rear aluminum wing support frames. Then, adjust the aluminum wing support frame along the wing brace and the steel cable to make it straight.

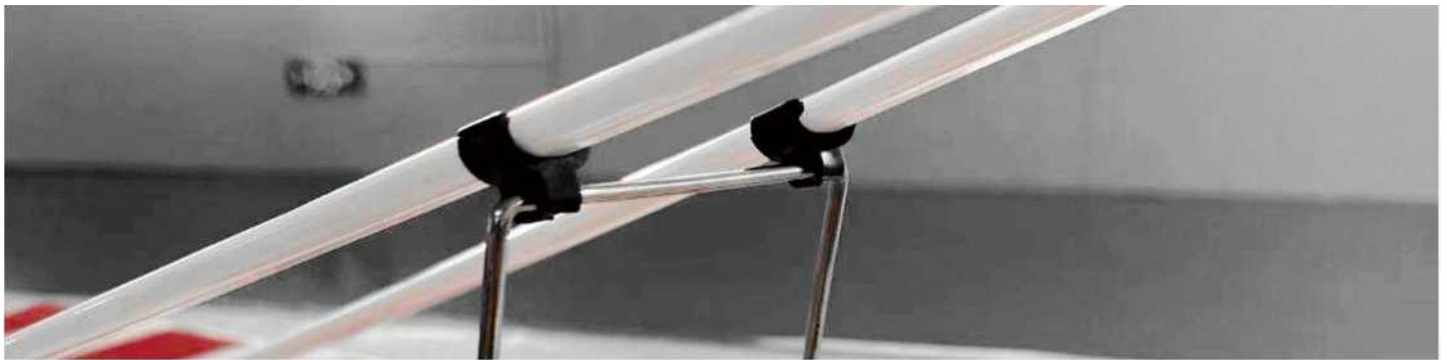

11. Insert the cable through the sleeve, and then thread the cable through the hole of the vertical stabilizer cable buckle, and then thread it back into the sleeve. After adjusting the tightness of the cable, use pliers to clamp the sleeve.

12. Repeat steps to affix the other end of the cable to the buckle on the same side horizontal stabilizer. Finally, cut off any excess cable. Then proceed to do the same on the other side.



(Note: Do not over tighten the cable because it can cause the horizontal stabilizer to not be level and affect flight characteristics.)

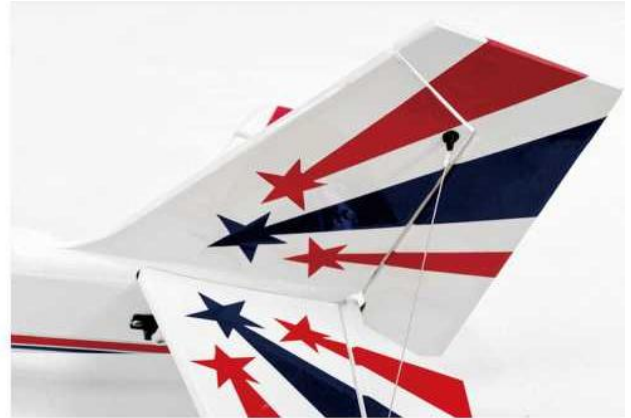

13. Pass the remaining two cables through the sleeve, make a loop, and then thread them back into the sleeves while leaving a cable loop with a diameter of about 3mm. Then clamp the sleeve with pliers. Next, remove the second tail wheel screw. Align the cable loop holes of the two cables with the tail wheel screw hole, and then reinsert the screw back into the fuselage. Finally, fix the other end of the cable to the pull buckle on the same side horizontal stabilizer from previous steps. Be sure to cut off the excess cable.



14. Take out the 4 ball joint connecting rods, install 1 of the 58.5mm on the left as well as the right wing. Next, install the 60.5mm on the rudder, and the 90.5mm on the elevator.

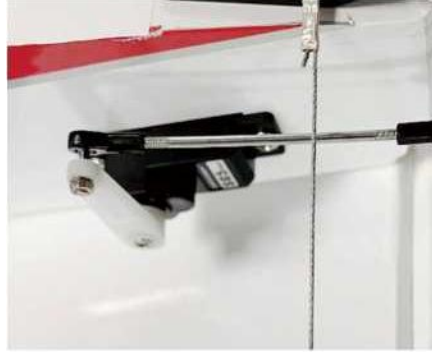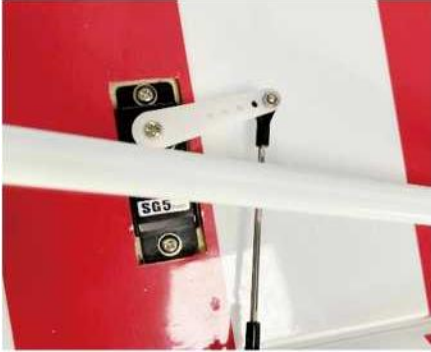


## Elevator Assembly



1. Take out the horizontal stabilizer and insert it face up into the slot in the tail of the fuselage, be sure to insert it fully. Insert the wing tubes into the front of the fuselage. Look forward from the rear of the fuselage to make sure that the horizontal stabilizer and wing tubes are parallel, and then use adequate glue on the gap to affix the horizontal stabilizer on the fuselage.




2. Carefully locate the slots which have been made on horizontal tail and vertical tail, lightly cut through the covering but not into the balsa sheeting; Insert 2mm inner hexagon screwdriver into the slots to make sure the glue inflow into the slot to secure the control arms.
3. Use sand paper to roughen the root of control arms. Try to insert it into the mounting slot to adjust the position at first, then take it out, apply glue to the slot and the root of the control arm, insert it into the slot to secure it.
4. Install elevator servos, assemble the servo arm and control arm with ball head pull rod, secure the cup head hexagonal screw, gasket, ball head to the servo arm, secure it with iron pliers, adjust the ball head pull rods to proper length.
5. Secure screw, washer, ball head to control arm.
6. The mounting locations of elevator servo and Ball head pull rod as in Figure.

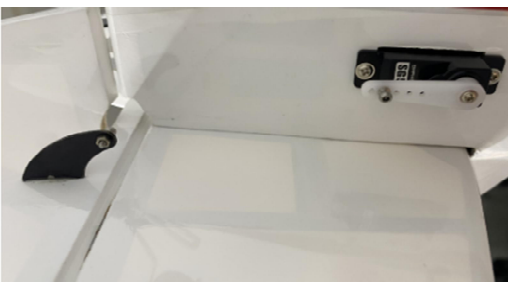



## Landing gear assembly

1. Take out the landing gear and related parts as below, install the wheels and wheel covers as shown, then, add a bit of blue thread lock screw glue to the tip of the screw. Then, align the holes of the landing gear with the holes of the fuselage, take out the wooden fittings and glue them to the landing gear, and then insert screws, be sure to tighten

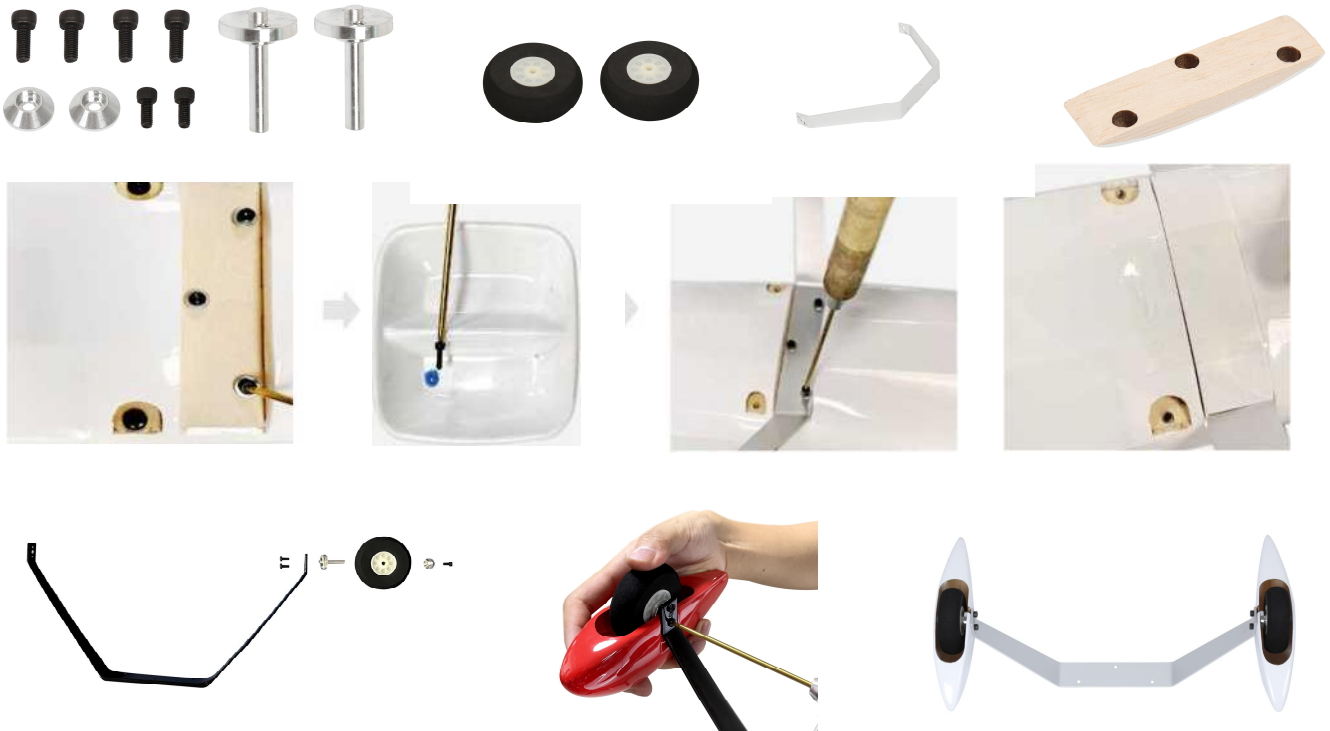


2. Insert the rudder hinge into the slot of the vertical stabilizer, the bottom of the rudder and fuselage is kept flush, and there should be a gap of about 0.3mm (or about 4 sheets of printer paper thick) between the leading- edge ( L.E.) of the rudder and the trailing- edge ( T. E.) of the vertical stabilizer. Use appropriate glue to stick the hinge on the vertical stabilizer. After the glue is cured, take out the T2x12mm Phillips self-tapping gasket screw, and pass it through the slot of the aluminum plate of the tail wheel. Screw it into the hole at the bottom of the rudder.



## Cowl and Engine Assembly



### ➤ Motor Installation

1. Put the screws into motor mount and put aluminum columns to the other side of screws.
2. Apply glue to the screws and install motor to motor holder.

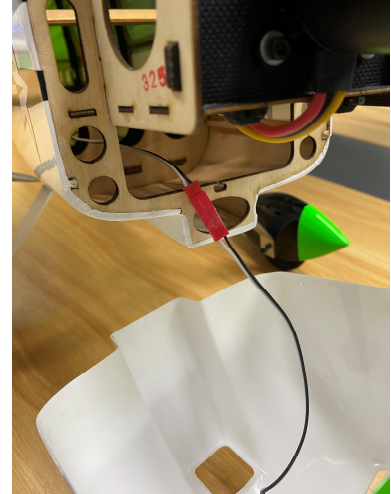

### ➤ ESC Installation

1. Attach the connected ESC to ESC holder with double-sided tape and Secure with cable ties.
2. Tie the wires of ESC and motor with fastening strap.
3. Connect the ESC and motor wires.

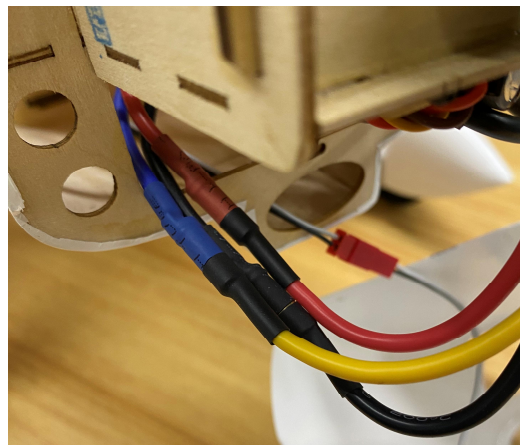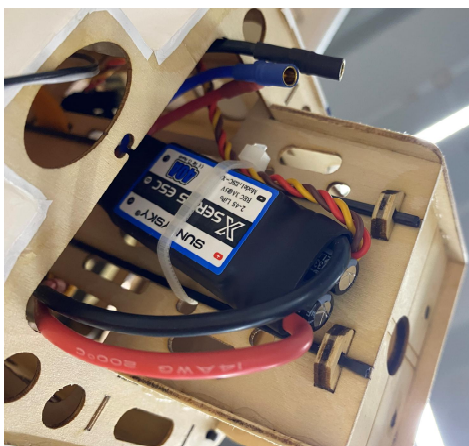

3. Tighten the propeller onto the motor shaft as shown in the figure. Make sure the spinner's back plate is flush with the propeller base. Add a little bit of blue thread lock to the tip of the screw, reinstall the spinner to the motor shaft, then tighten screw.



**Important note: A 6-channel receiver is required / Navigation Lighting system: Designate a channel on the receiver as the lighting channel.**

- ◆ There is a designated air outlet pre-cut into the balsa wood behind the bottom of the cowling on the bottom of the aircraft. To access, carefully cut the aircraft skin and balsa wood with a sharp blade. A hobby knife is recommended. Please refer to the picture below.



## Guarantee

The KAVAN Europe s.r.o. products are covered by a guarantee which fulfils the currently valid legal requirements in your country. If you wish to make a claim under guarantee, please contact the retailer from whom you first purchased the equipment. The guarantee does not cover faults which were caused in the following ways: crashes, improper use, incorrect connection, reversed polarity, maintenance work carried out late, incorrectly or not at all, or by unauthorised personnel, use of other than genuine KAVAN Europe s.r.o. accessories, modifications or repairs which were not carried out by KAVAN Europe s.r.o. or an authorised KAVAN Europe s.r.o., accidental or deliberate damage, defects caused by normal wear and tear, operation outside the Specification, or in conjunction with equipment made by other manufacturers. Please be sure to read the appropriate information sheets in the product documentation!

## Záruka

KAVAN Europe s.r.o. zaručuje, že tato stavebnice je v okamžiku prodeje prosta vad jak v materiálu, tak i v provedení. Tato záruka nekryje žádné části poškozené používáním nebo v důsledku jejich úpravy; v žádném případě nemůže odpovědnost výrobce a dovozce přesáhnout původní pořizovací cenu stavebnice. Firma KAVAN Europe s.r.o. si také vyhrazuje právo změnit nebo upravit tuto záruku bez předchozího upozornění. Stavebnice je předmětem průběžného vylepšování a zdokonalování - výrobce si vyhrazuje právo změny konstrukčního provedení bez předchozího upozornění.

Protože firma KAVAN Europe s.r.o. nemá žádnou kontrolu nad možným poškozením při přepravě, způsobem stavby a nebo materiály použitými modelářem při dokončování modelu, nemůže být předpokládána ani přijata žádná odpovědnost za škody spojené s používáním uživatelem sestaveného modelu. Okamžikem, kdy se uživatel rozhodne použít jím sestavený model, přejímá veškerou odpovědnost. Pokud není kupující připraven přijmout tuto odpovědnost, měl by stavebnici neprodeně vrátit v úplném a nepoužitém stavu na místě, kde ji zakoupil.

Tento záruční list opravňuje k provedení bezplatné záruční opravy výrobku dodávaného firmou KAVAN Europe s.r.o. ve lhůtě 24 měsíců. Záruka se nevztahuje na přirozené opotřebení v důsledku běžného provozu, protože jde o výrobek pro sportovně-modelářské použití, kdy jednotlivé díly pracují pod mnohem vyšším zatížením, než jakému jsou vystaveny běžné hračky. Pohyblivé díly modelu (motor, serva a jejich převody, atd.) podléhají přirozenému opotřebení a po čase může být nezbytná jejich výměna. Záruka se nevztahuje také na jakoukoliv část modelu, která byla nesprávně instalována, bylo s ní hrubě nebo nesprávně zacházeno, nebo byla poškozena při havárii.

## Garantie

Die KAVAN Europe s.r.o. Produkte verfügen über eine Gewährleistung, die die Erfordernisse der gesetzlichen Regelungen in ihrem Land erfüllt. Falls Sie eine Beanstandung mit dem Anspruch auf Gewährleistung haben, kontaktieren Sie den Händler, bei dem Sie das Produkt gekauft haben. Die Gewährleistung deckt nicht Fehler ab, die durch Absturz, unsachgemäßer Gebrauch, unkorrekter Anschluss, Falschpolung, verspätete Wartung, Verwendung nicht originaler Zubehörteile, Veränderungen oder Reparaturen die nicht durch KAVAN Europe s.r.o. oder berechtigte Stellen, absichtliche Beschädigung, Verwendung außerhalb der zugelassenen Spezifikationen oder in Verbindung mit Produkten anderer Hersteller, entstanden sind.

Bitte lesen Sie vor Gebrauch die entsprechende Bedienungsanleitung sorgfältig durch!

## Záruka

KAVAN Europe s.r.o. zaručuje, že táto stavebnica je v okamihu predaja prosta chýb ako v materiáli, ako aj v prevedení. Táto záruka nepokrýva žiadne časti poškodené používaním alebo v dôsledku ich úpravy; v žiadnom prípade nemôže zodpovednosť výrobcu a dovozcu presiahnuť pôvodnú obstarávaciu cenu stavebnice. Firma KAVAN Europe s.r.o. si tiež vyhradzuje právo zmeniť alebo upraviť túto záruku bez predchádzajúceho upozornenia. Stavebnice je predmetom priebežného vylepšovania a zdokonaľovania - výrobca si vyhradzuje právo zmeny konštrukčného prevedenia bez predchádzajúceho upozornenia.

Pretože firma KAVAN Europe s.r.o. nemá žiadnu kontrolu nad možným poškodením pri preprave, spôsobom stavby alebo materiálmi použitými modelárom pri dokončovaní modelu, nemôže sa predpokladať ani prijať žiadna zodpovednosť za škody spojené s používaním užívateľom zostaveného modelu. Okamihom, kedy sa užívateľ rozhodne použiť ním zostavený model, preberá všetku zodpovednosť. Pokiaľ nie je kupujúci pripravený prijať túto zodpovednosť, mal by stavebnicu bezodkladne vrátiť v úplnom a nepoužitom stavu na mieste, kde ju zakúpil.

Tento záručný list opravňuje na vykonanie bezplatnej záručnej opravy výrobku dodávaného firmou KAVAN Europe s.r.o. v lehote 24 mesiacov. Záruka sa nevzťahuje na prirodzené opotrebenie v dôsledku bežnej prevádzky, pretože ide o výrobok pre športovo-modelárske použitie, kedy jednotlivé diely pracujú pod oveľa vyšším zaťažením, než akému sú vystavené bežné hračky. Záruka sa nevzťahuje tiež na akúkoľvek časť modelu, ktorá bola nesprávne inštalovaná, bolo s ňou hrubo alebo nesprávne zaobchádzané, alebo bola poškodená pri havárii.

Made in China

The logo for KAVAN, featuring the word "KAVAN" in a bold, stylized, black font. The letters are thick and blocky, with a slight shadow effect. A registered trademark symbol (®) is located to the right of the word.