





Virus Extreme

ASSEMBLED READY-TO-RUN MODEL



Montageanleitung / Assembly

MONTAGEANLEITUNG • ASSEMBLY INSTRUCTIONS


1. DIFFERENZIAL VORNE / HINTEN • DIFFERENTIAL FRONT / REAR

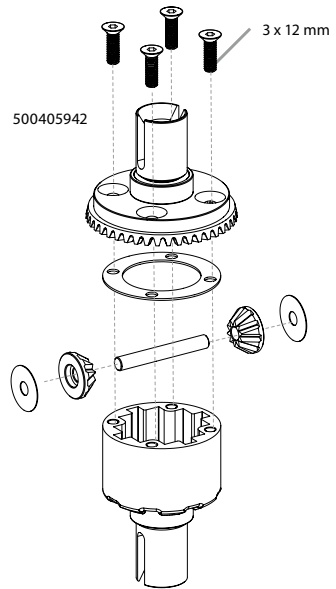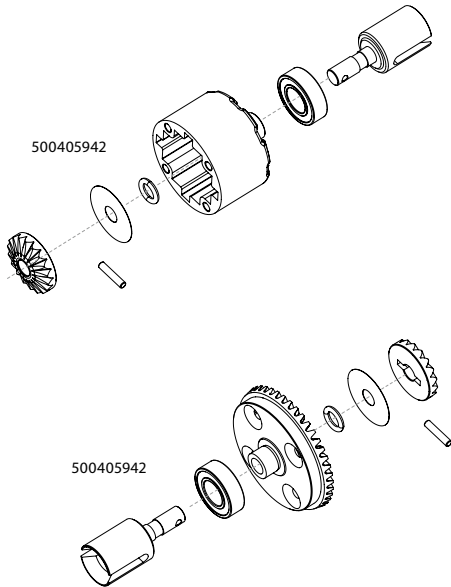



2. MITTELDIFFERENZIAL • CENTER DIFFERENTIAL

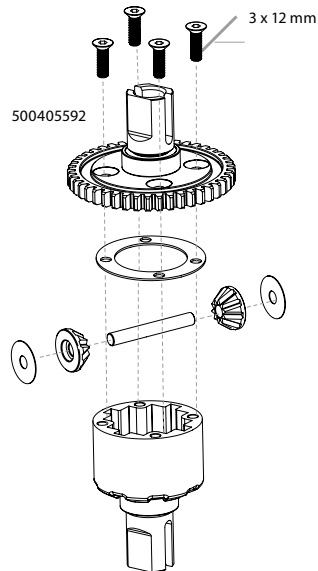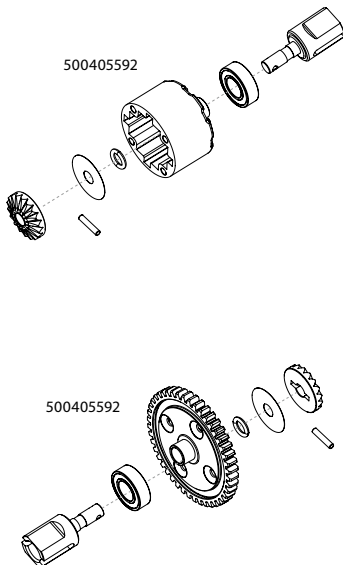


3. VORDERES DIFFERENZIAL • FRONT DIFFERENTIAL


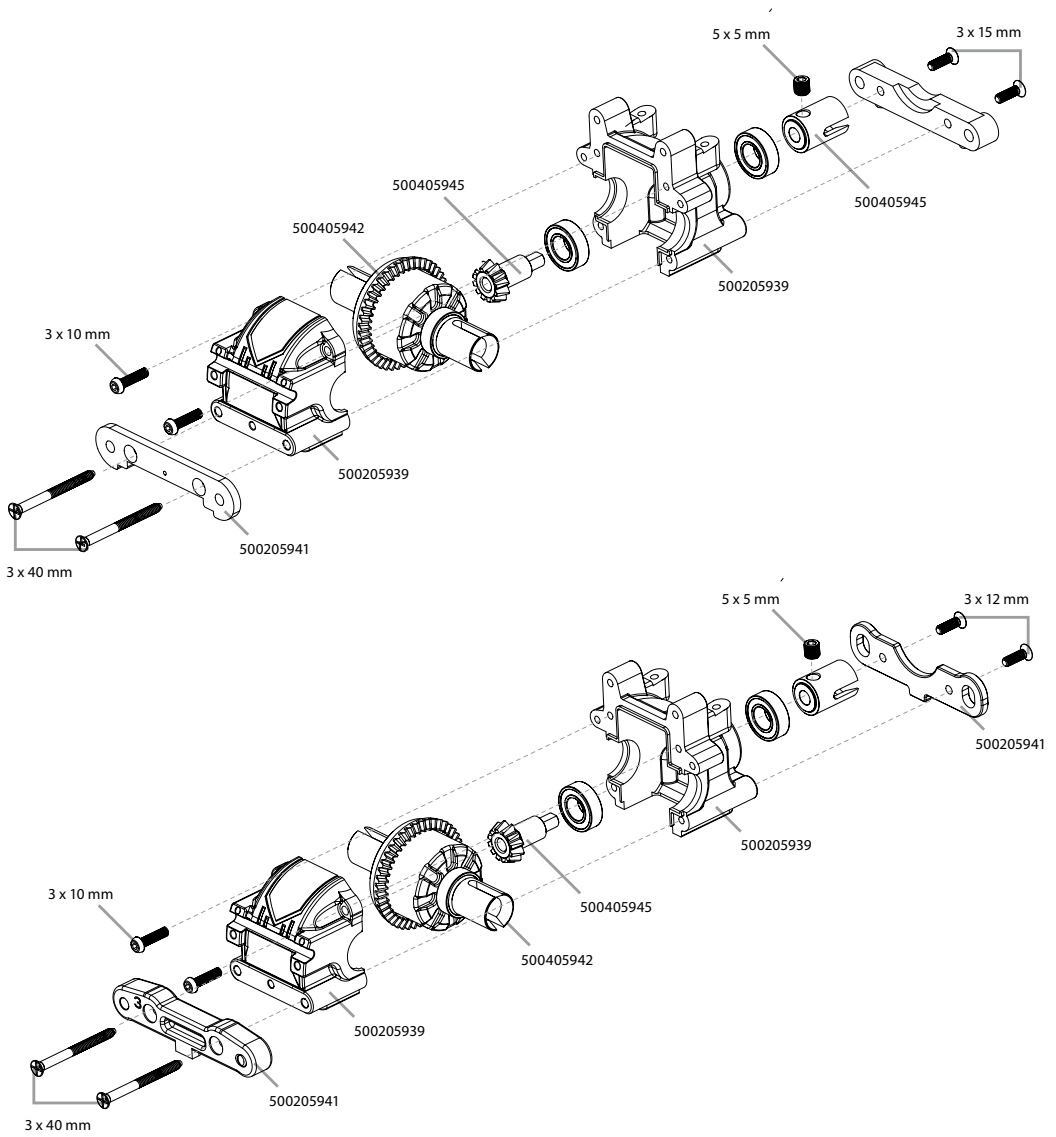


4. MONTAGE VORDERACHSE • ASSEMBLING FRONT UNIT

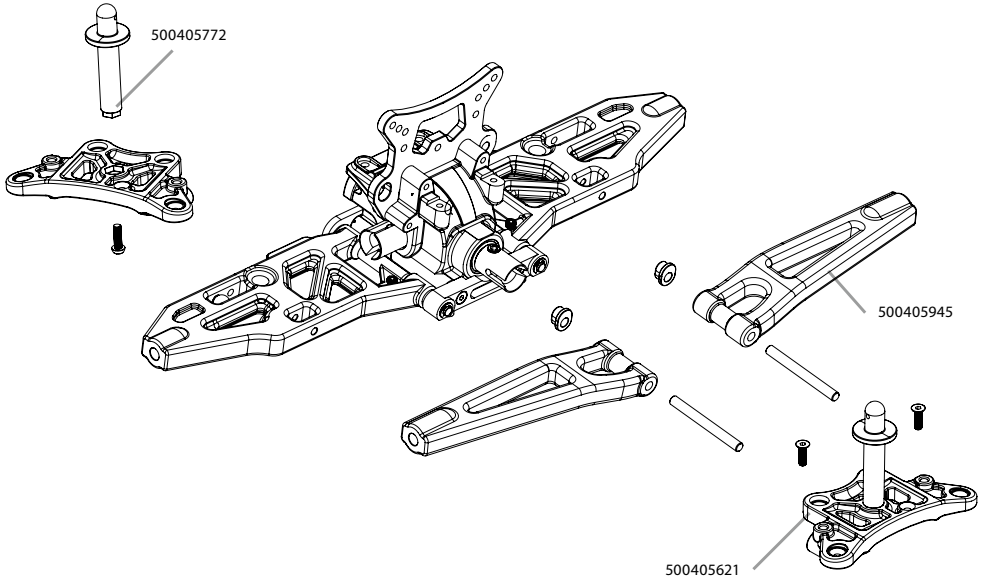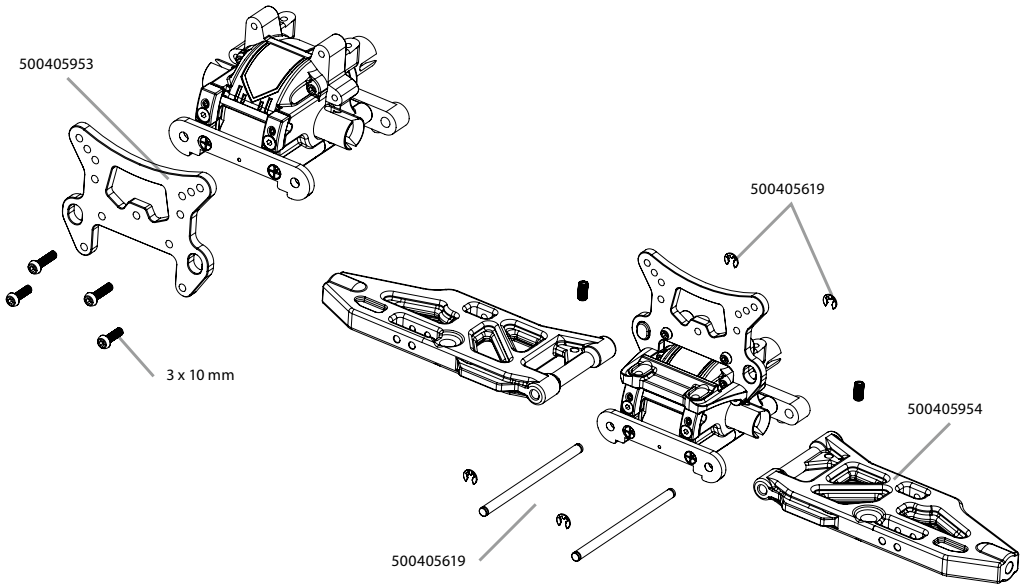


5. ACHSSCHENKEL VORNE • FRONT HUBS

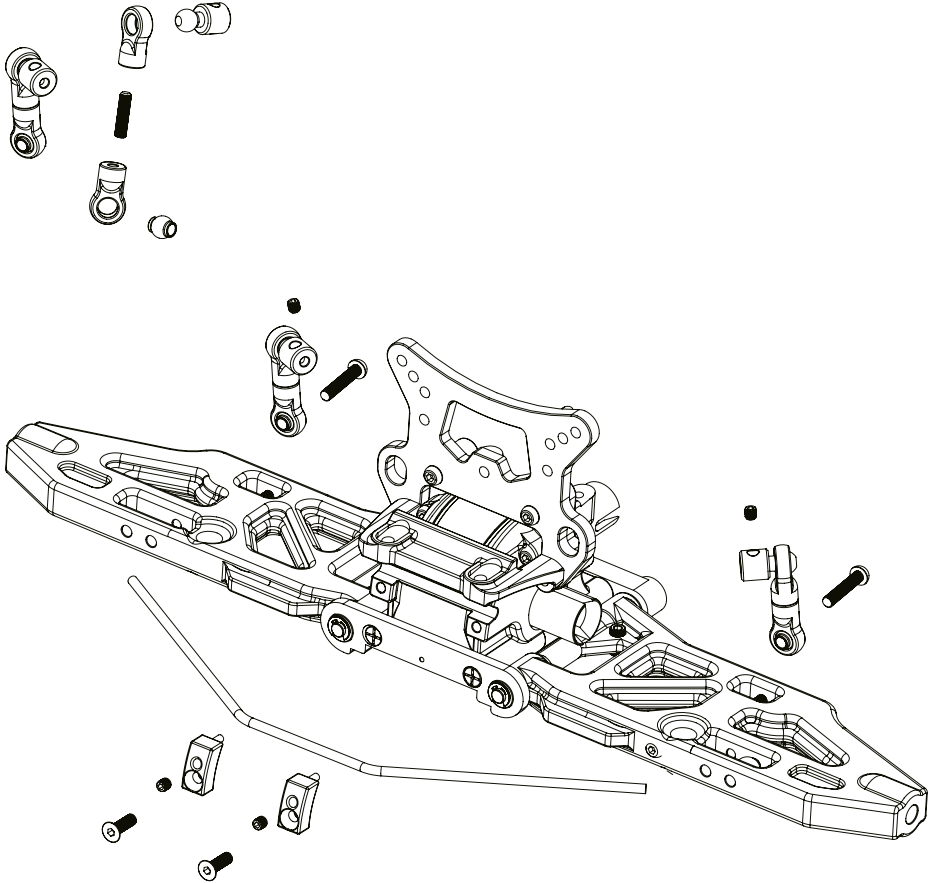


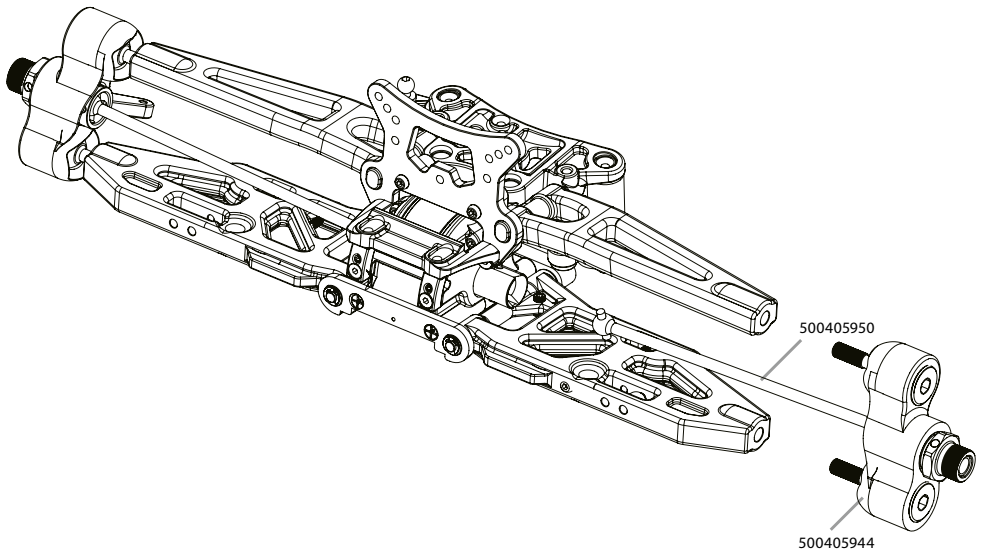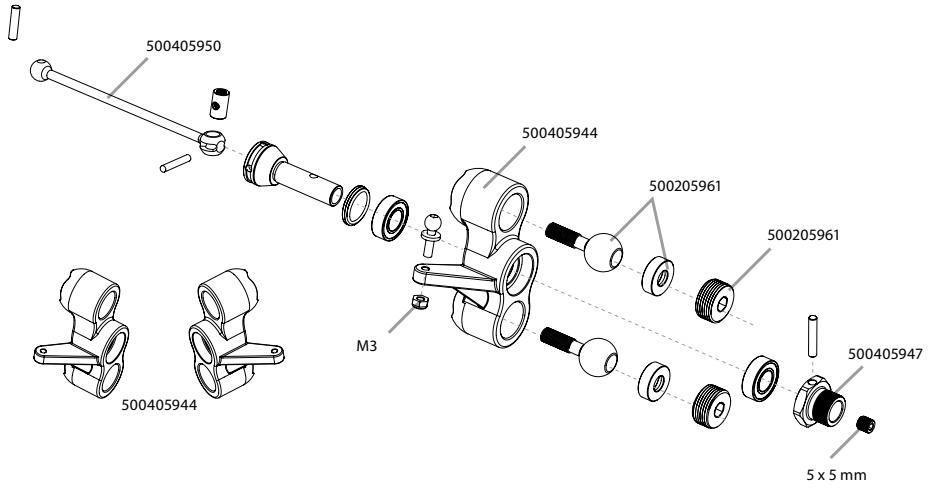


6. MONTAGE LENKUNG • ASSEMBLING STEERING

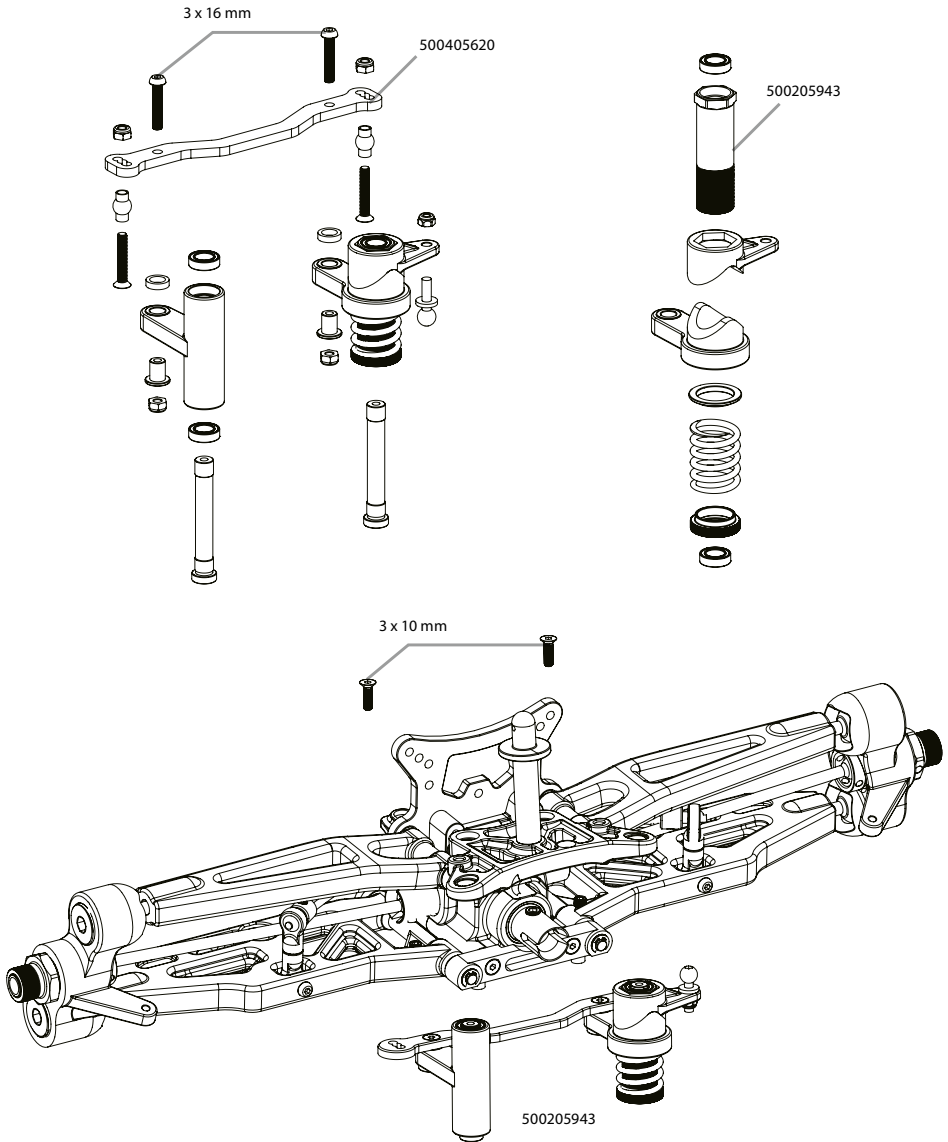


7. MONTAGE HINTERACHSE • ASSEMBLING REAR UNIT


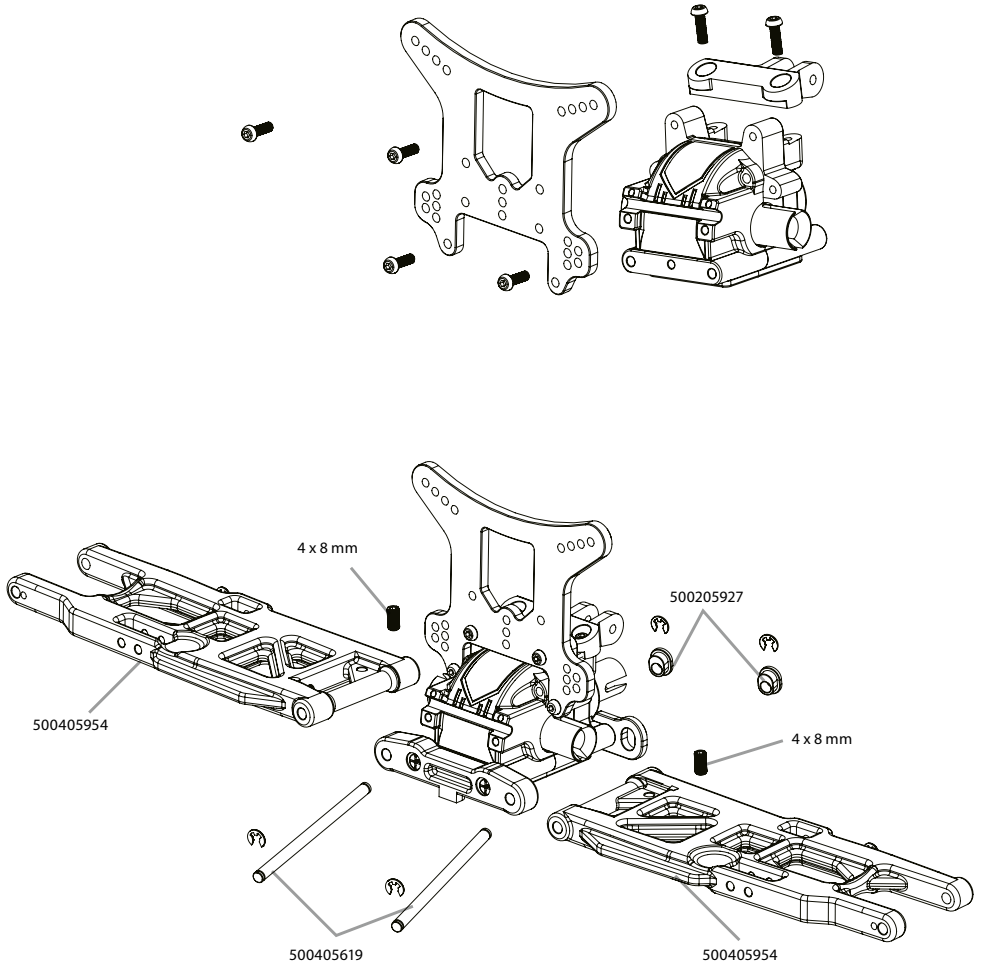


8. ACHSSCHENKEL HINTEN • REAR HUBS


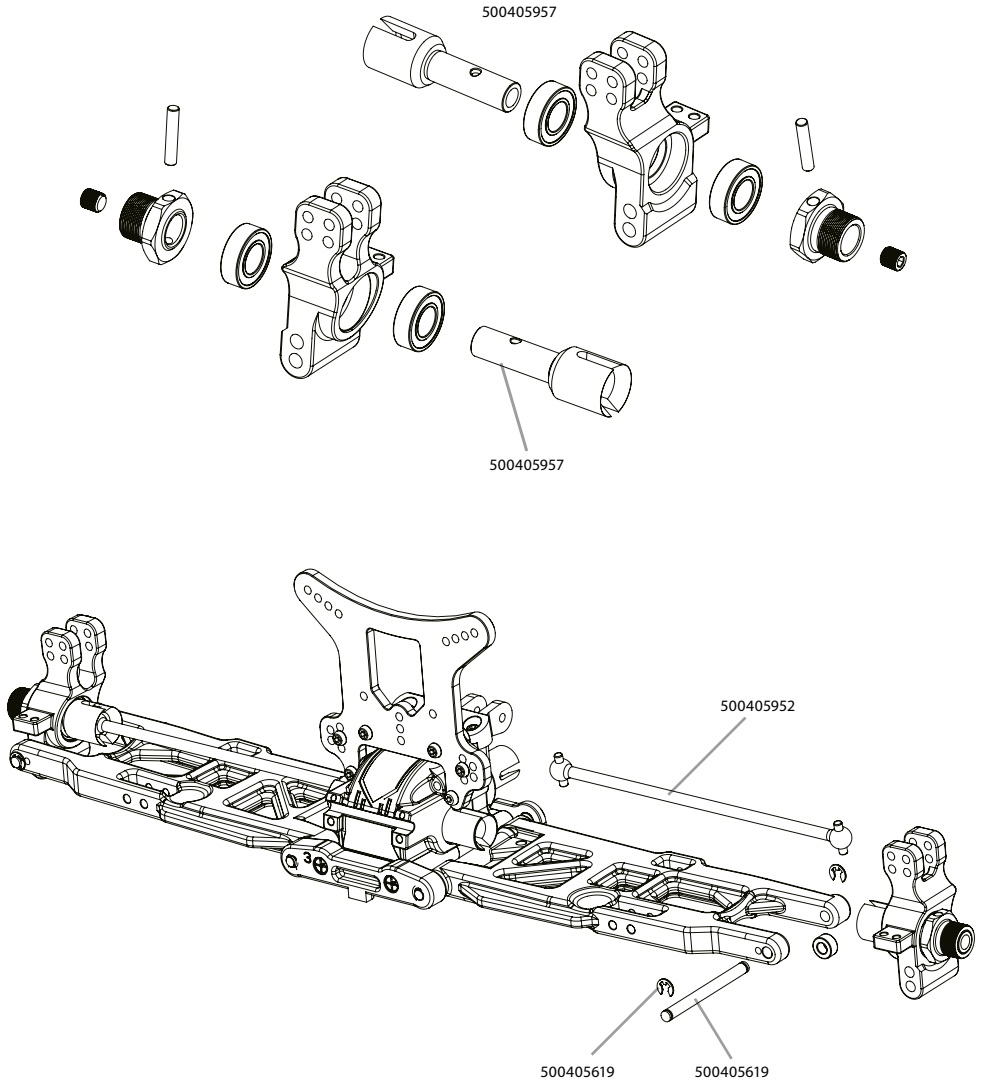


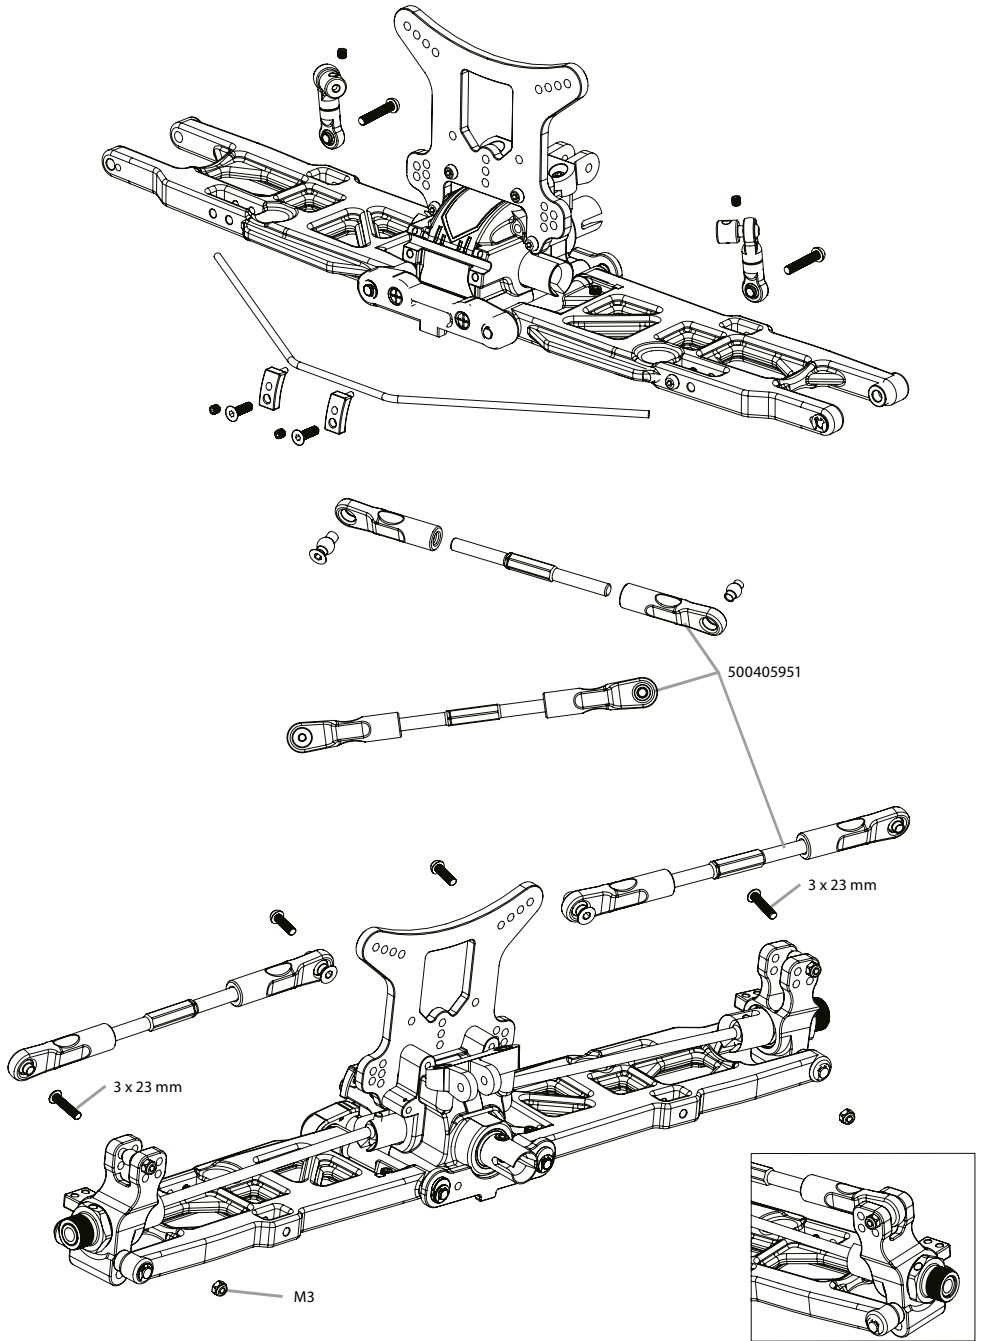


9. MONTAGE MOTOR • ASSEMBLING ENGINE

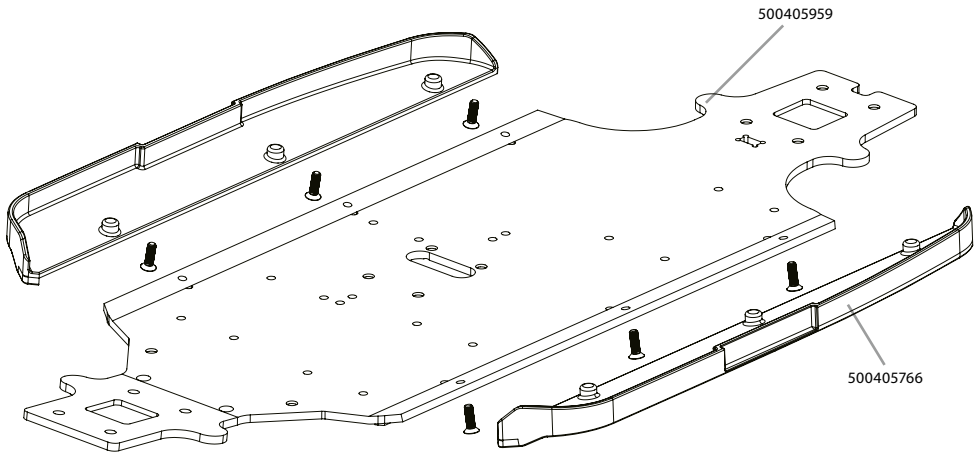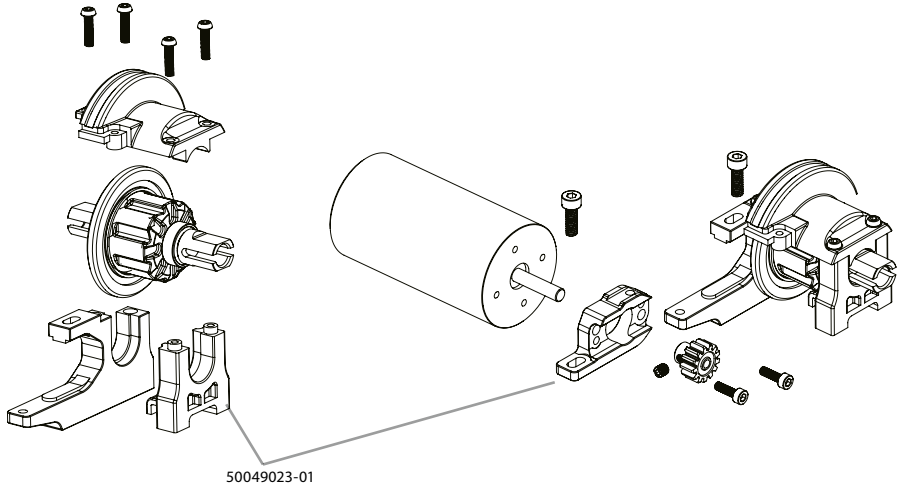


10. CHASSISPLATTE • CHASSIS-PLATE

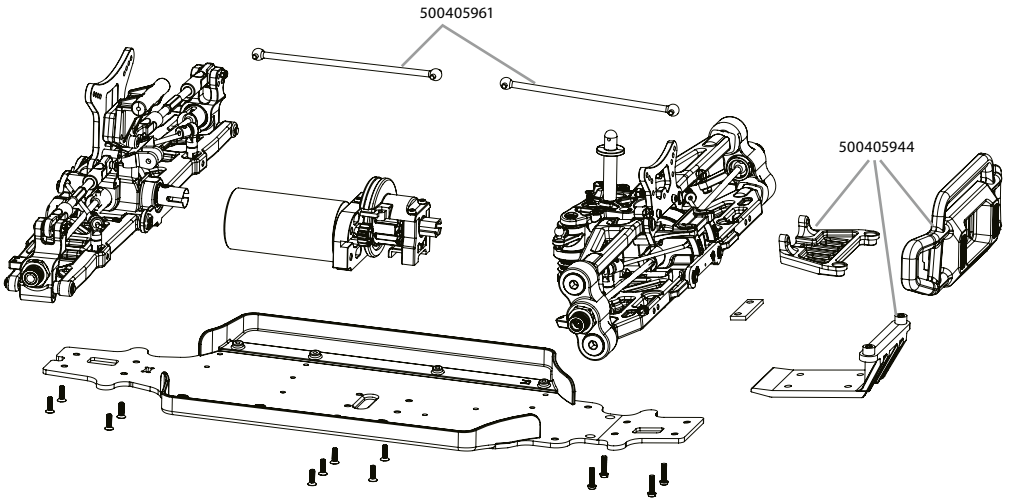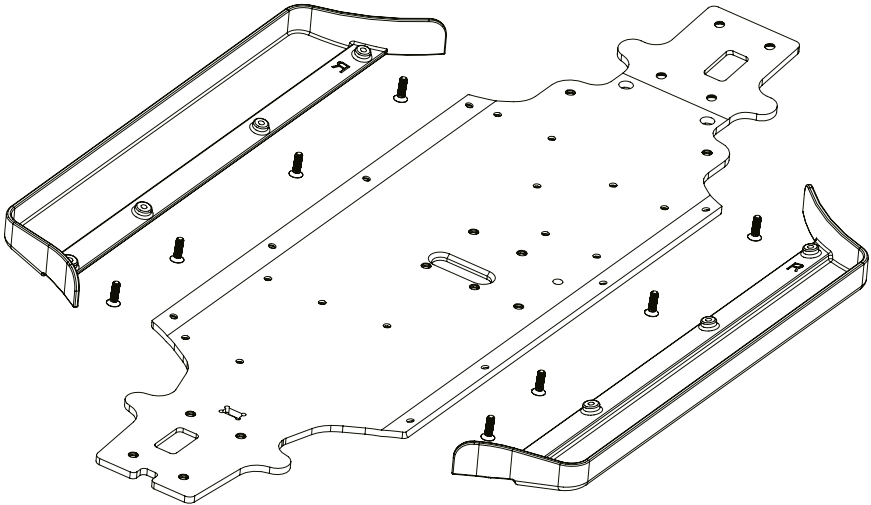


11. CHASSISVERSTEIFUNG • CHASSIS-BRACE

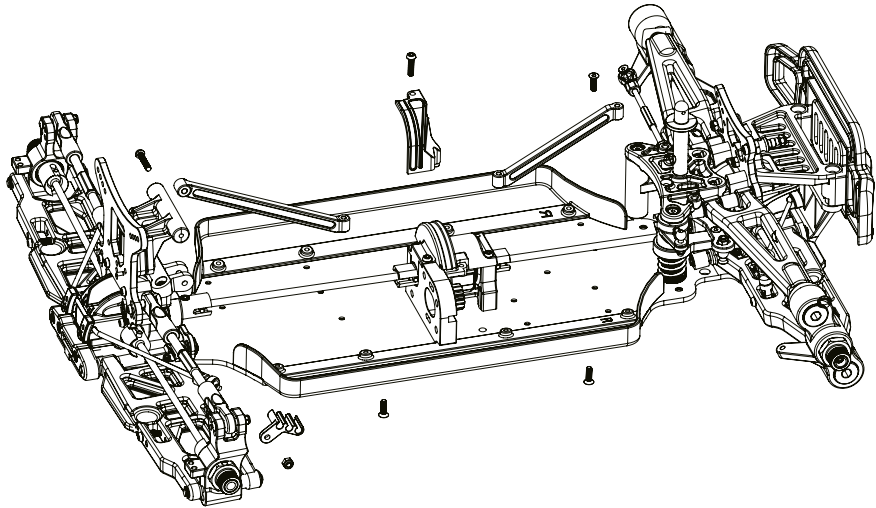


12. LENKGESTÄNGE • STEERING LINKAGE

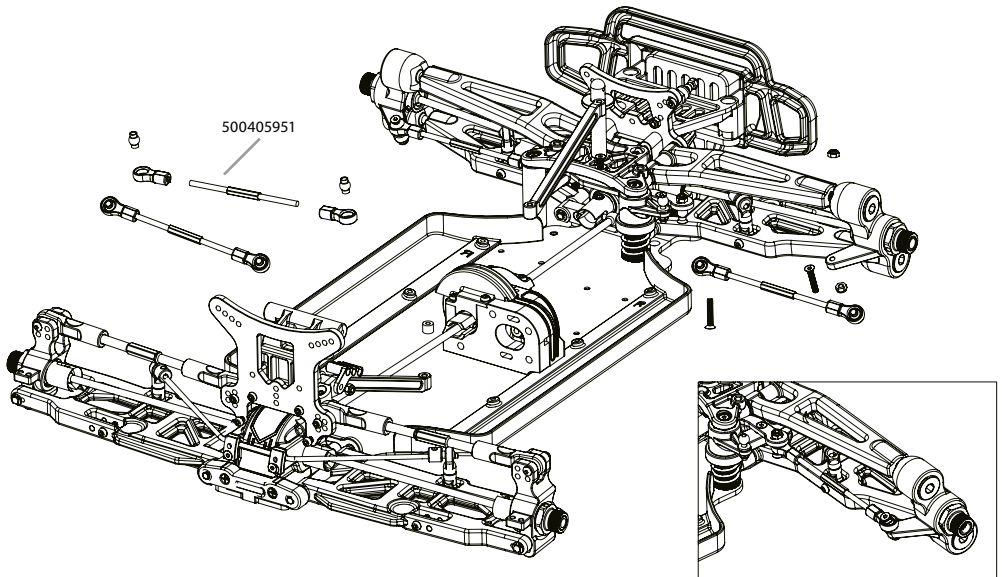







13. AKKUHALTERUNG • BATTERYMOUNT

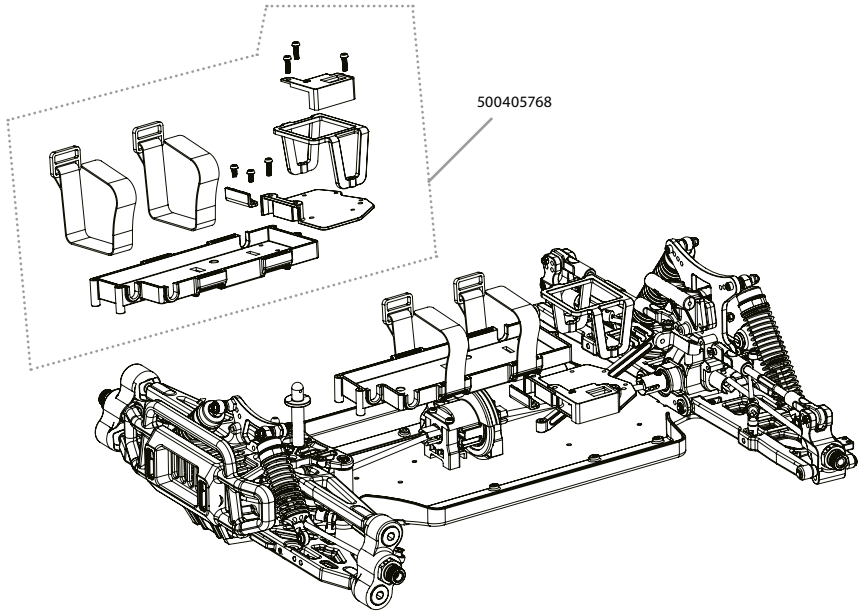


14. RC-BOX / SERVO • RC-BOX / SAVER

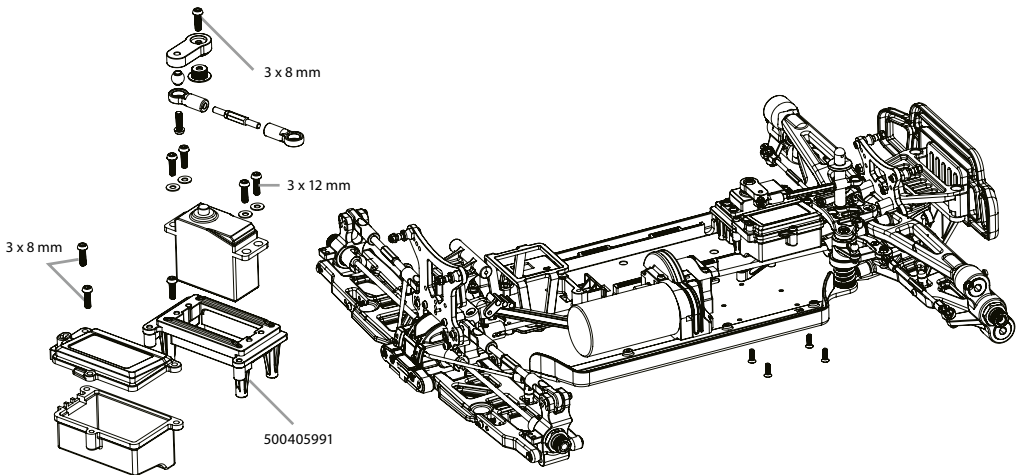


15. STOSSDÄMPFER • SHOCK ABSORBERS

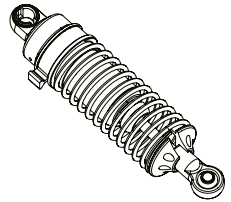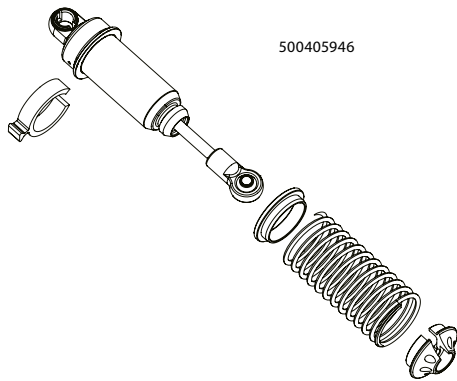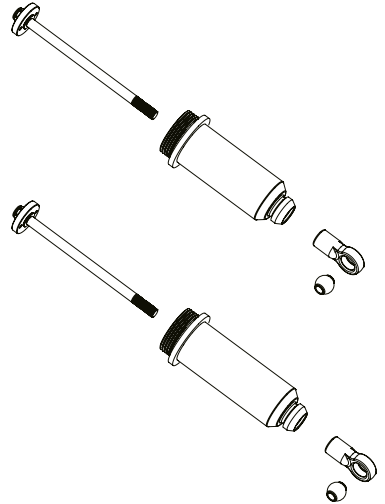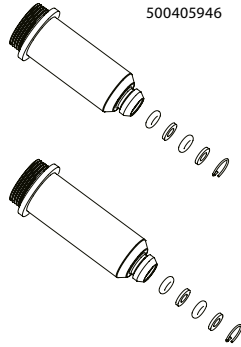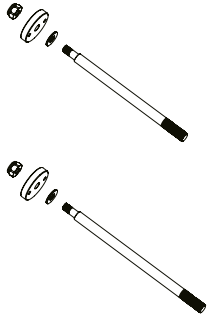


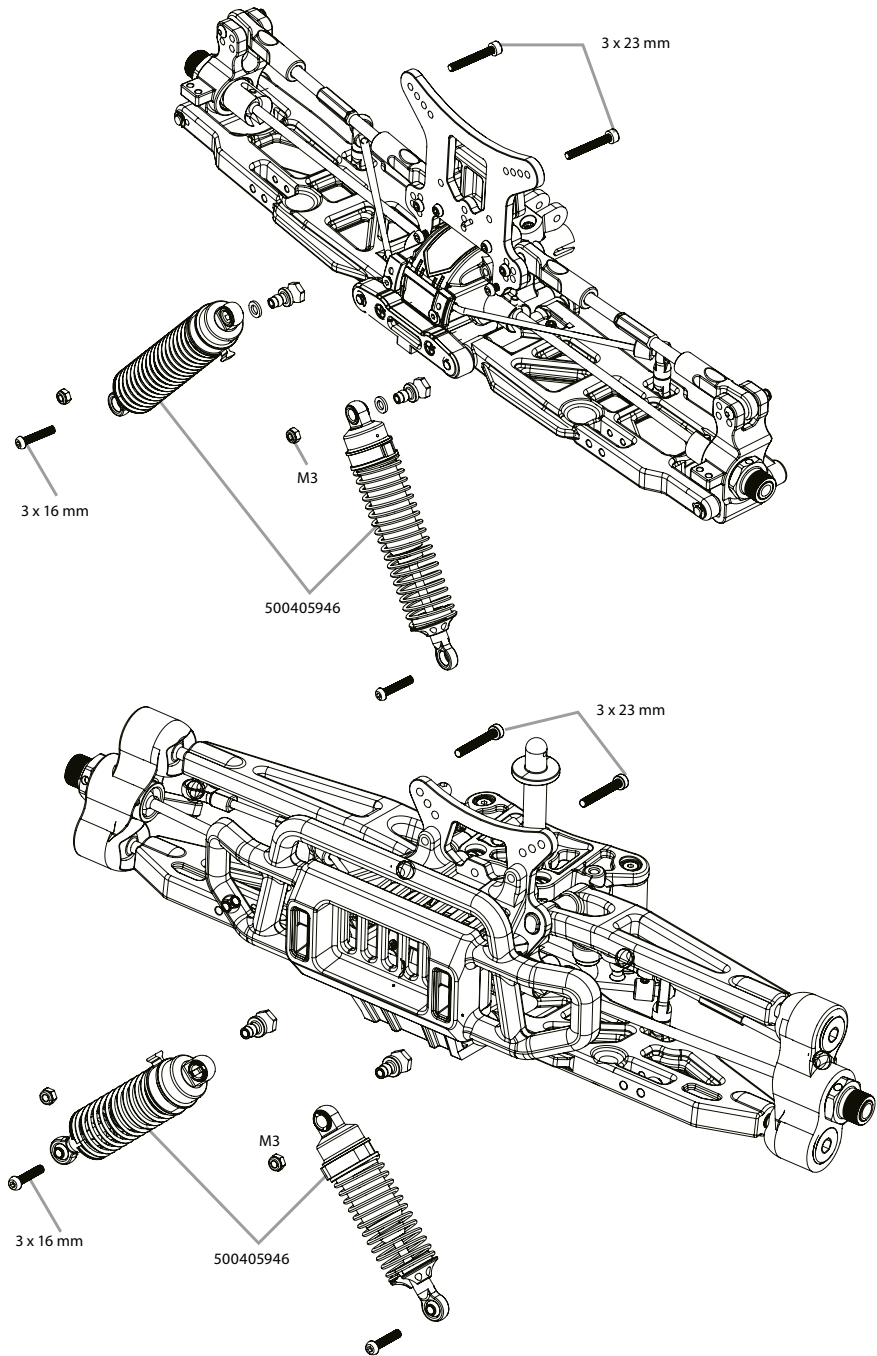


16. SPOILER - WING


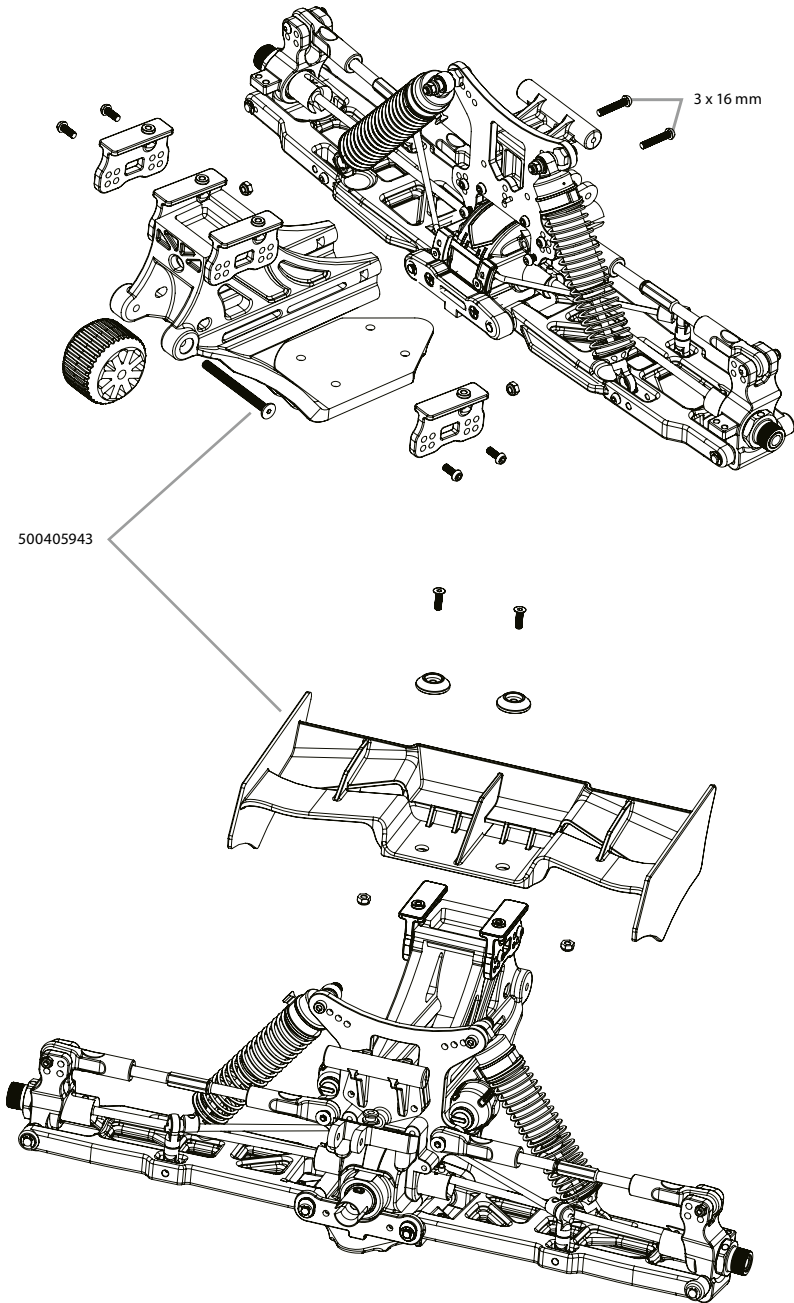




17. RÄDER • WHEELS

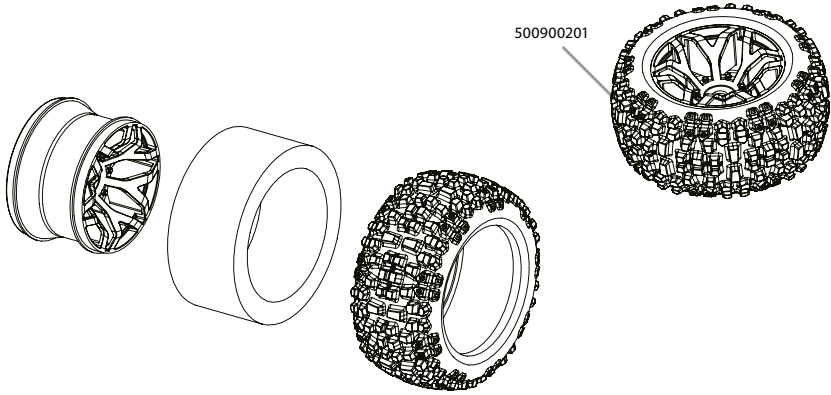


18. KAROSSERIE • BODY

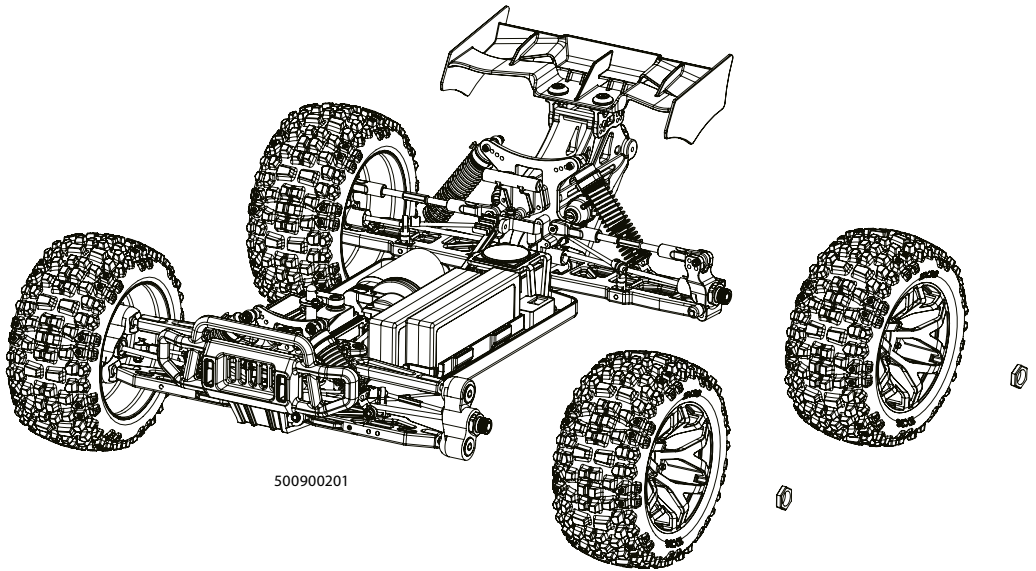

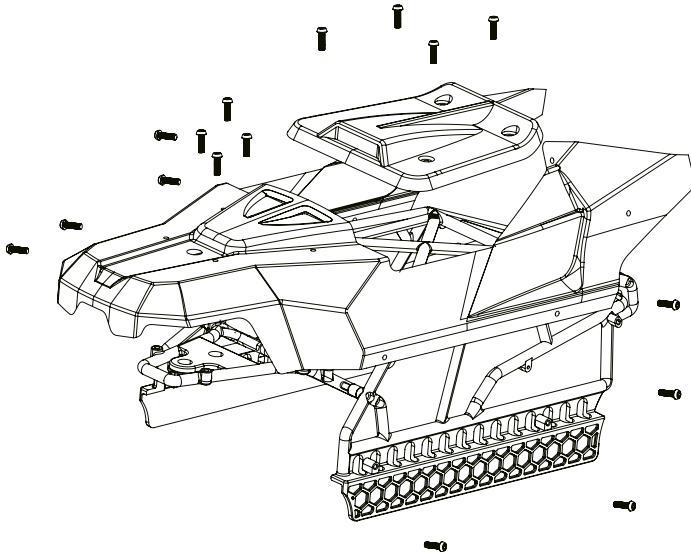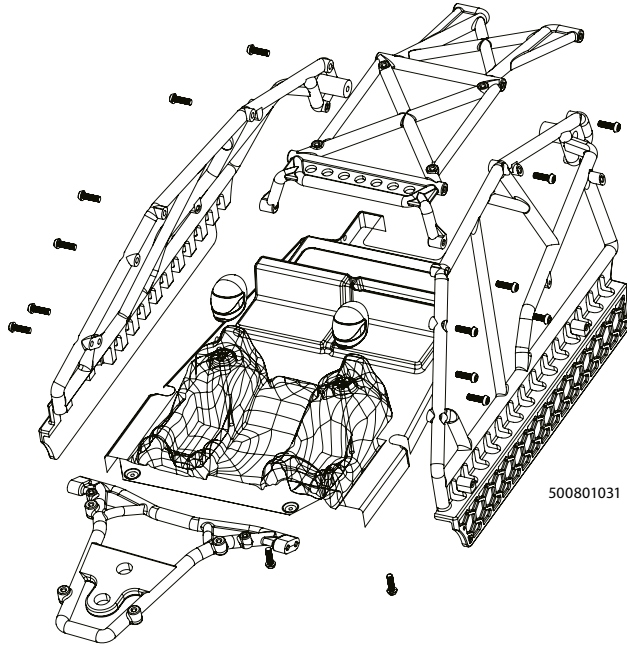

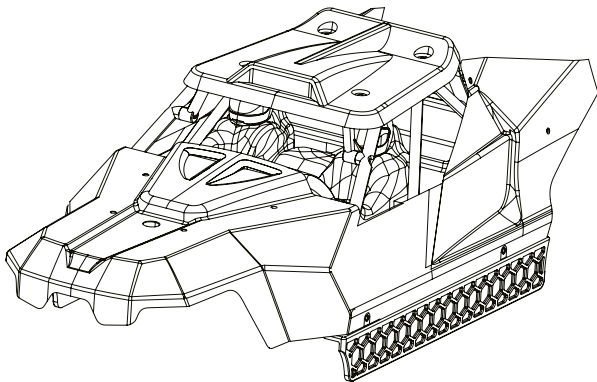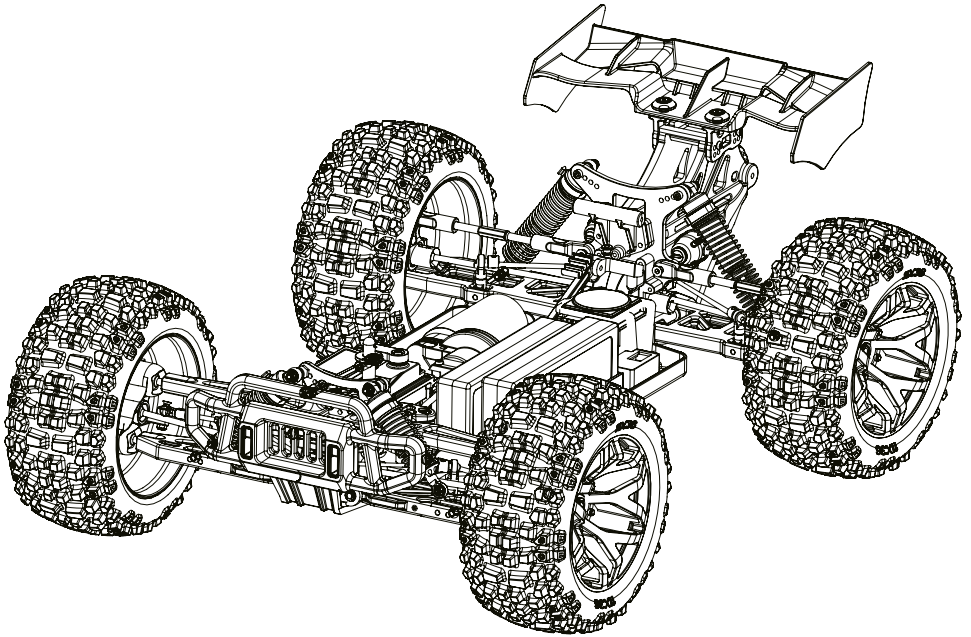

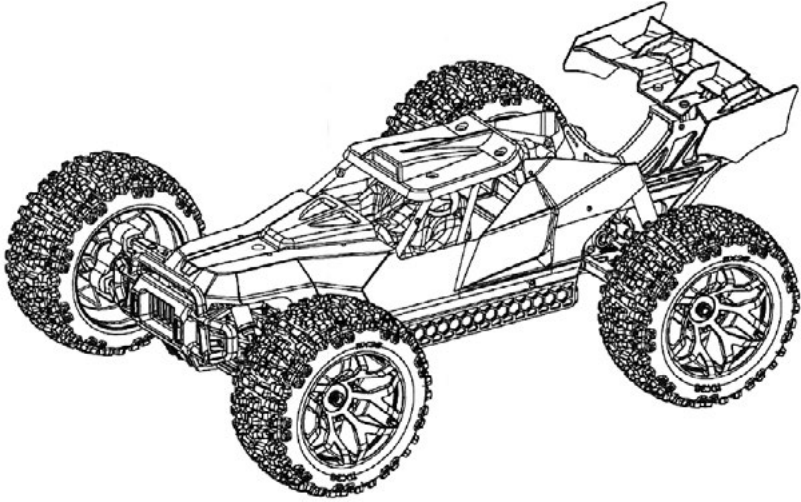



TAMIYA-CARSON
Modellbau GmbH & Co. KG

Werkstraße 1 // D-90765 Fürth // www.carson-modelsport.com

+49 3675 7333 343

Service-Hotline for Germany: Mo-Do 8-12 Uhr & 12.30-16 Uhr // Fr 8-12.30 Uhr
CARSON-Model Sport // Abt. Service // Mittlere Motsch 9 // 96515 Sonneberg